

Case & Crate

Locker or Bin Back (CC-BACK) Installation Instructions



The CC BACK is an add on to any Case & Crate Bin or Locker unit, securing the storage with a thin metal sheet from behind.


Video guides, spec sheets, and additional support are available at caseandcrate.com.

Parts List

- (1) CC Back Panel
- (6) Self-Drilling Screws

Tools needed

- Drill with Phillips head bit
- Small clamp (optional)

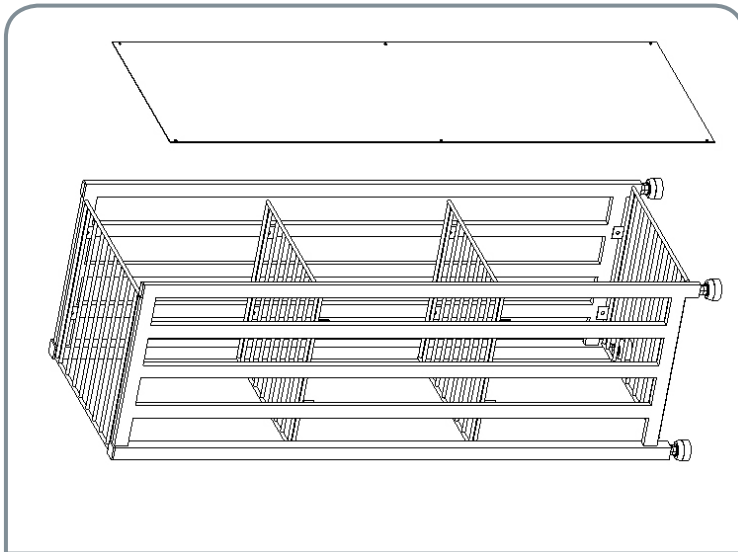


Step 1: Prep the Back

Fully assemble any Case & Crate unit (sold separately). With the unit laying face down on the floor; line the edges of the panel up with the edges of the unit. The panel will cover the back of each bin.

Pro tip: For large installations of Bins or Lockers being retro fitted, the panel can be clamped in place while the unit is upright.

**There are no pilot holes on Bins or Lockers*

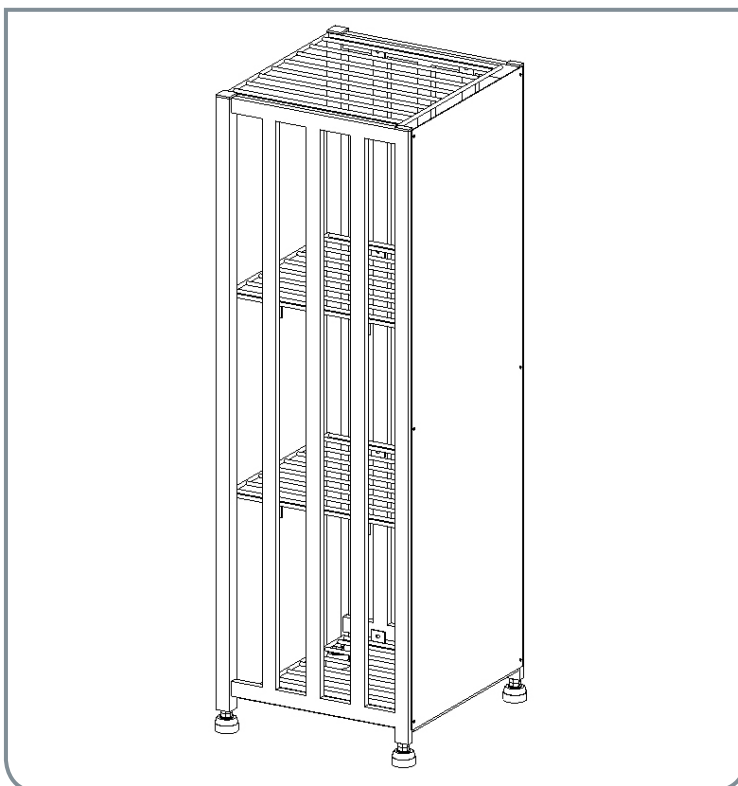

Step 2: Assemble

With the back panel in place (a small clamp or two is helpful here, too), with the provided self-drilling screws position one screw through one of the corner mounting holes in the back panel.

Using a drill and Philips head bit drive the screw into the upright of the unit. Check alignment and repeat for remaining mounting holes.